



## Fillmaster Routine Maintenance Procedures



Wipe down the dispensing tip, the tip nozzle, and dispensing area with an isopropyl alcohol wipe.



Clean the inside of the dispensing tip nozzle with a cotton swab soaked in isopropyl alcohol.



Flush 500 ml of water (two flushes of 250 ml each) through the dispenser after the tip and nozzle cleaning.



Drain the water filtration tank completely by turning on the auxiliary faucet at the sink.

- a. The tank will take about 5 -7 minutes to empty completely.
- b. Be sure to turn off the faucet after water stops flowing so the tank can fill back up.
- c. Note from the water specialist: If you empty the tank in the evening before the pharmacy closes, the tank will have 2-4 hours of time to refill on its own. By doing this, you will come into the pharmacy in the morning to a fresh tank of water and there will be no disruption to workflow.



For video tutorials, scan this QR code or go to [www.flavorx.com/auto](http://www.flavorx.com/auto)

Other Side






Replace the dispensing tip on the Fillmaster the first of every month.

- a. If you are using the Clean Dispensing Tip package, be sure to initial and date the box.



Ensure your Fillmaster dispenser is properly calibrated by following the steps on the dispenser or in the User Manual.

- a. If you notice the Fillmaster dispensing inaccurately after repeated calibration attempts, contact Fillmaster Technical Support at 1-800-884-5771.

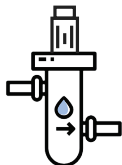

Replace filters in the water purification system and sanitize the system and the dispenser.

- a. If you are registered for FillPure, the Fillmaster certified technician will complete this process during the annual visit.
- b. If you are not registered for FillPure, consult your User Manual for a step-by-step guide or go to [fillmastersystems.com/maintenance](http://fillmastersystems.com/maintenance).

**Following these routine maintenance procedures ensures your water purification system and Fillmaster dispenser continue to function properly and produce safe, clean water.**

fillmastersystems.com  
800-884-5771  
9475 Gerwig Lane  
Columbia, MD 21046